

1. EN Connect sensor to control device

SE Anslut sensor till kontrollenhet

DK Tilslut sensor til kontrollenheden

NO Koble sensoren til kontrollenheden

FI Liitä anturi ohjauslaitteeseen

FR Connecter le capteur à l'appareil de contrôle

DE Sensor mit der Haupteinheit verbinden


PL Podłącz czujnik do urządzenia sterującego

HU Csatlakoztassa az érzékelőt a vezérlőkészülékhez

CZ Připojte snímač k ovládacímu zařízení

EE Ühendage andur juhtseadmega

1.1

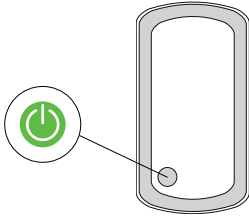


1.2




1.3

Scan

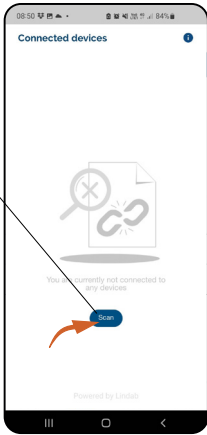


1.4

Connect

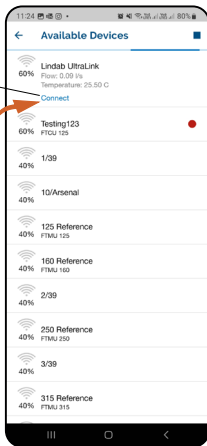


1.5

Standard PIN: 1111

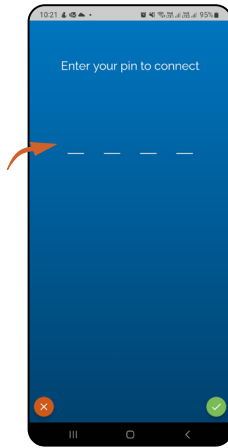


1.6

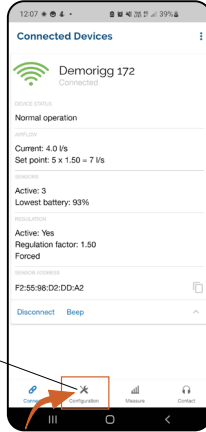

1.7




1.8

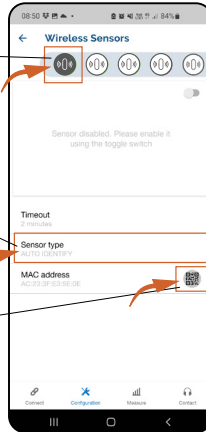

1.9

Sensor type
AUTO IDENTIFY

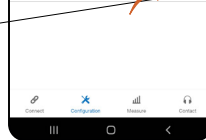

1.10

1.11





1.12



Go to
step 4

Inactive/
Inaktiv/
Epäaktiivinen/
Inactif/
Nieaktywny/
Inaktív/
Neaktivní/
Mitteaktiivne

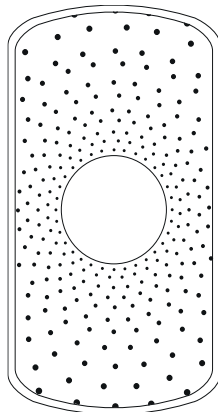
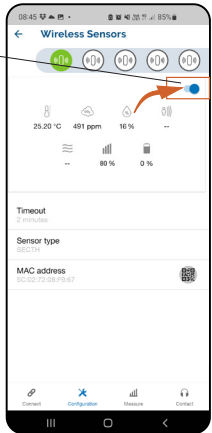


Lindab WirelessSensor
SETH

Installation instruction

2. EN Positioning of sensor

 - SE Placering av sensor
- DK Placering af sensor
- NO Plassering av sensor
- FI Anturin sijoittaminen
- FR Positionnement du capteur
- DE Platzierung des Sensors
- PL Umieszczenie czujnika
- HU Az érzékelő elhelyezése
- CZ Umístění snímače
- EE Anduri positsioneerimine

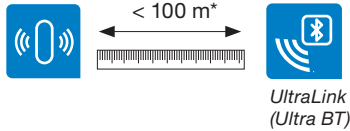

* Free line of sight/Fri sikt/Frit udsyn/Vapaa näköyhteys/Champ de vision libre/Freie Sichtlinie/Wolna linia wzroku/Szabad rálátás/Volná viditelnost/Vaba vaatevälja

See system manual for more details/Se systemmanualen för mer information/Se systemvejledningen for flere oplysninger/Se systemhåndboken for mer informasjon/Katso lisätietoja järjestelmäkäsikirjasta/Voir le manuel du système pour plus d'informations/Weitere Informationen finden Sie im Systemhandbuch/Więcej informacji można znaleźć w instrukcji obsługi systemu/További információért lásd a rendszer kézikönyvét/Vice informáci naleznete v systémovej příručce/Lisa-teabe saamiseks vaadake süsteemi juhendit



Ultra BT




Regula BT


3. EN Set control setting to control device

- SE SE Sätt kontrollinställning för kontrollenheten
- DK DK Vælg type af styresignal
- NO NO Angi kontrollinnstilling for kontrollenheten
- FI FI Aseta ohjausasetukseksi ohjauslaite
- FR Définir le type de communication pour contrôler l'appareil
- DE Kommunikationseinstellungen für die Haupteinheit ändern
- PL Zmien ustawienia sterowania dla jednostki głównej
- HU HU Állítsa be az eszköz vezérlési beállítását
- CZ CZ Nastavte typ řízení
- EE EE Seadistage juhtseade seadme juhtimiseks

3.1

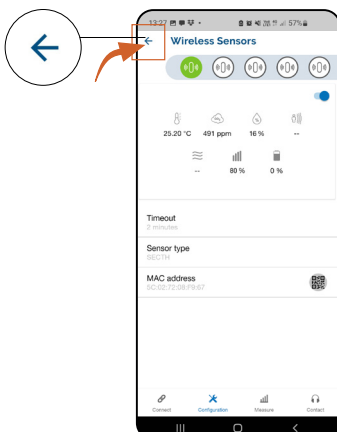


3.2

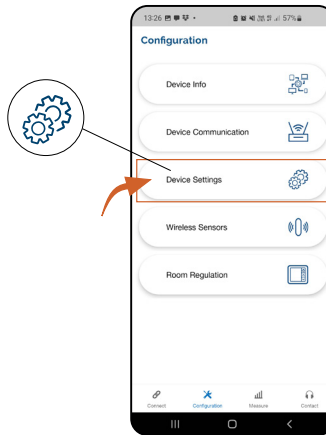

3.3

Controlled by
Bus
(Modbus, Exoline)


Controlled by
Analog
(0-10 V / 2-10 V
/ 10-2 V / 10-0 V)

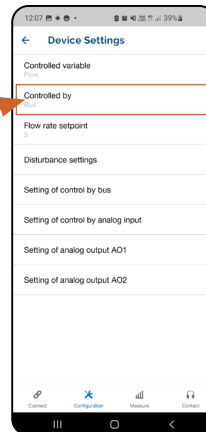

4. EN If sensor doesn't connect

- SE Om sensorn inte ansluter
- DK Hvis sensoren ikke har forbindelse
- NO Hvis sensoren ikke kobles til
- FI Jos anturi ei kytkeydy
- FR Si le capteur ne se connecte pas
- DE Wenn keine Verbindung zum Sensor hergestellt werden kann
- PL Jeśli nie można połączyć się z czujnikiem
- HU Ha az érzékelő nem csatlakozik
- CZ Pokud se snímač nepřipojí
- EE Kui andur ei ühendu

 4.1




4.2



5. EN Support

- SE Support
- DK Support
- NO Brukerstøtte
- FI Tuki
- FR Support
- DE Support
- PL Pomoc
- HU Támogatás
- CZ Podpora
- EE Tugi

5.1

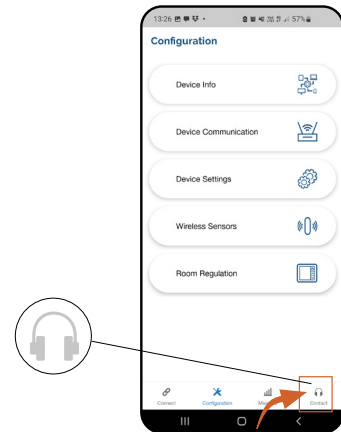

5.2

