

Lindab **FRA** 

Installation instruction - UK

Asennusohje - Fl

Montageanleitung - DE

Istruzioni di montaggio - IT


Instructions de montage - FR



Product Tuote Produkt Prodotto Produit



Dimensions Mitat Maße Dimensioni Dimensions

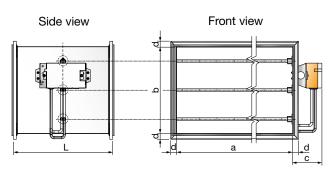

**NB!** Different flange types are available, see order code and dimension table below.

a and b dimensions, see order code.

#### **Dimension table**

Flange type	d mm	L mm	c mm
LS	20	341	
RJFP20	20	341	106
RJFP30	30	342	100
RJFP40	40	343	


### Regulator type table

Туре	Regulator
FRA-D	VRU-D3-BAC
FRA-M	VRU-M1-BAC



# Installation instruction

### FRA

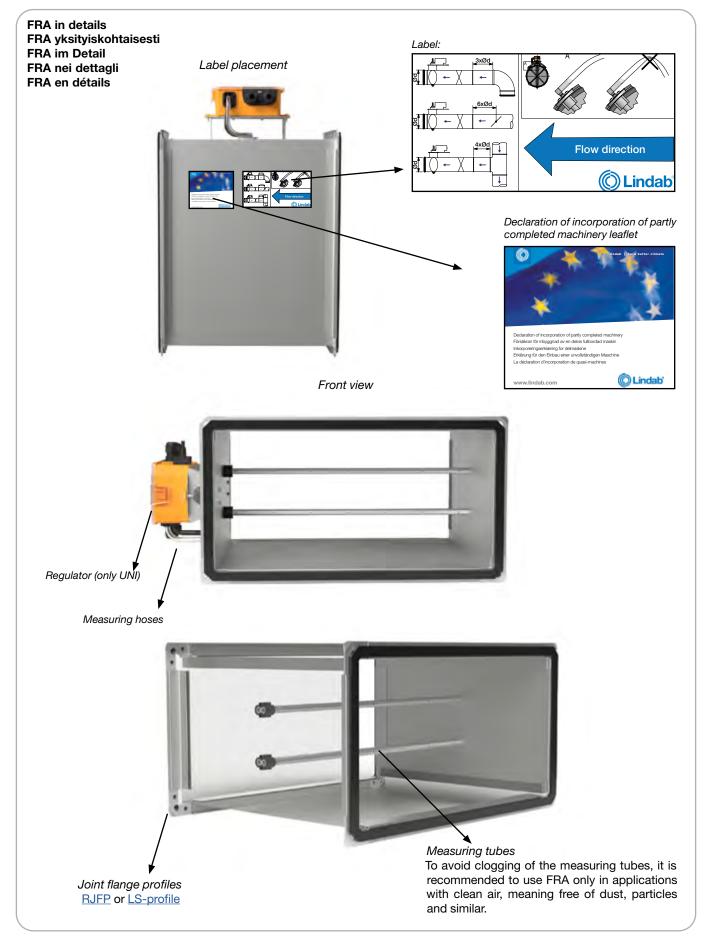



The accuracy of volume flow measurement depends on the flow conditions in front of the measuring cross. It is preferable to have a long straight duct section in front of the measuring point, according to the table below.

If these recommendations are not followed, it will cause an unstable flow measurement and therefore higher inaccuracy in the regulation of the required air flow.

Components	Recommended straight duct before unit
Bend	3 x d <sub>h</sub> *
Tee-piece	4 x d <sub>h</sub> *
Damper	6 x d <sub>h</sub> *


d<sub>b</sub>\* is the hydraulic diameter for a rectangular duct (and FRA),

 $d_{b}^{*} = 2 \times a \times b / (a + b)$ 

d<sub>h</sub> can be calculated by using FRA dimension a and b:

Air flow direction Bend FRA Duct Duct

Example above showing top view of recommended straight duct distance between duct bend and a FRA.

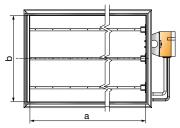

Front view of FRA and dimension a and b.

### Assembly - rectangular air duct systems:

Using LS-profile. Assembly instruction, please go to Lindab Rectangular air duct systems, LS-profile.

Using RJFP-profiles. Assembly instruction, please go to to Lindab Rectangular duct systems, RJFP-profile.

VRA is prepared for insulation with 50 mm thick insulation material. VRA can only be installed with damper blades in a horizontal position.

You can find general information about air duct systems, theory and calculations following this link.



# Installation instruction

Balancing Säätöohjeet Einregulierung Bilanciamento Réglage

	Universal controllers UNI(-M) / SPR(-M) / FAS(-M)
	To be a second
Belimo Service Tool ZTH-EU	ZK1-GEN ZTH EU
Belimo PC-Tool MFT-P via ZTH-EU	MI-OSM/N/12
Belimo Assistant App with NFC	
Belimo Assistant App with Bluetooth via ZIP-BT-NFC	
Note *)	Modbus/Bacnet/KNX settings can be done with ZTH-EU, PC-Tool, or Belimo Assistant App.
Note **)	Belimo Assistant App works with all Universal controllers.

Maintenance: Huolto Wartung Manutenzione Entretien

### Cleaning of measuring tubes

The visible parts of the product can be wiped with a damp cloth. Remove pressure hoses and blow clean air into the aluminum pipes.


Do not blow into the plastic hoses mounted on the Belimo unit, as this can damage the flow/membrane sensors.



### Cleaning the measuring tubes Please demount the hoses and use clean air to clean the hoses and measuring tubes.



## Mounting hoses step 1 Put the hoses back.

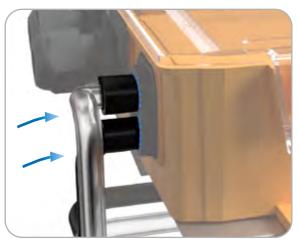

### Mounting hoses

Put the hoses back followed by squeezing the black tightness rings back.



Mounting hoses step 2 Squeeze the black tightness rings back.









Most of us spend the majority of our time indoors. Indoor climate is crucial to how we feel, how productive we are and if we stay healthy.

We at Lindab have therefore made it our most important objective to contribute to an indoor climate that improves people's lives. We do this by developing energy-efficient ventilation solutions and durable building products. We also aim to contribute to a better climate for our planet by working in a way that is sustainable for both people and the environment.

Lindab | For a better climate

